

Backlit Tension Graphics Lightbox Wall Mount Installation Instructions

TOOLS NEEDED: Tape measure, level, Phillips screwdriver, pencil


WHAT'S IN THE BOX: (1) Assembled lightbox frame, cleat (attached to backside of frame), Walldog (drywall) and Tapcon[®] (for concrete) screws, white/black blockout backer fabric, fabric graphic. It is important to not let the graphic insert touch the floor to avoid it from getting dirty.

STEP 1: Remove cleat from backside of frame, and install to the wall at the height you would like the lightbox. Using a level, secure it to the wall with the supplied Walldogs (for drywall) or Tapcons (for cement or masonry). For larger lightboxes, it is recommended to secure it into a wall stud.

STEP 2: Hang the assembled frame on the cleat.

STEP 3: Secure the frame to the wall with the remaining screws through the predrilled holes in the frame.

STEP 4: Take the white/black blockout backer fabric, and insert it into the back channel of the frame. The black side of the fabric goes against the wall. The gray pull tag goes in the lower right corner. The **RED**-edged, rubber strip goes into the channel first. Start with the corners and then insert the middle of each of the four sides of the fabric into the channel and work your way out to each of the corners. Insert the electrical cord through the precut slot of the fabric, and plug it in to your outlet before completely securing it in the back channel.

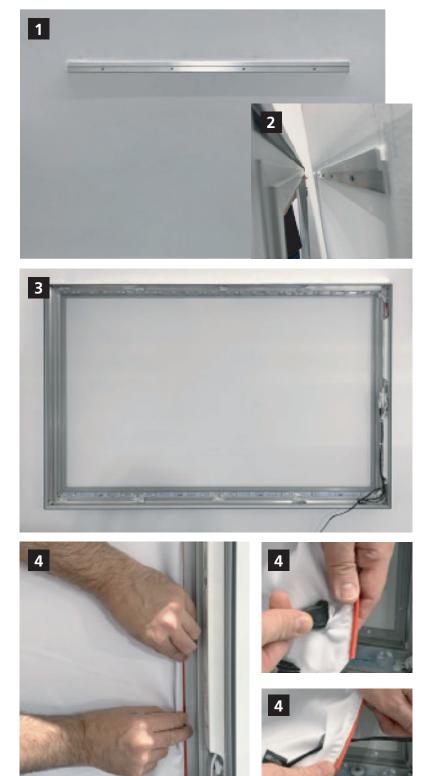

CALL PROGRAM HEADQUARTERS AT 1-800-766-5660 WITH ANY QUESTIONS.



DESIGNED AND PRODUCED BY DCI MARKETING, MILWAUKEE, WI




Backlit Tension Graphics Lightbox Wall Mount Installation Instructions

STEP 5: Insert the fabric graphic into the font channel of the frame. The gray pull tag goes in the lower right corner. The **RED**-edged, rubber strip goes into the channel first. Start with the corners and then insert the middle of each of the four sides of the fabric into the channel and work your way out to each of the corners.

NOTE: The fabric is designed to stretch to a taught, smooth fit. Your fabric will at first appear to be too short to fit.

STEP 6: After you fit the last portion of the graphic fabric into the end of the channel, slide your thumb back along the edge of the frame to smooth away any bumps that may have resulted. If wrinkles occur, take out sections and repeat Step 5 until you achieve a smooth finish.

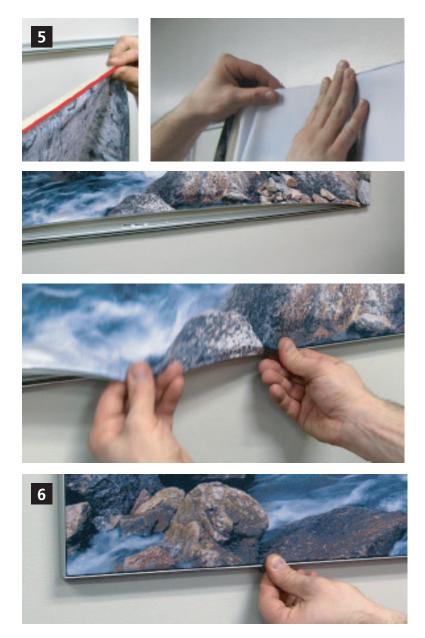

CALL PROGRAM HEADQUARTERS AT 1-800-766-5660 WITH ANY QUESTIONS.

