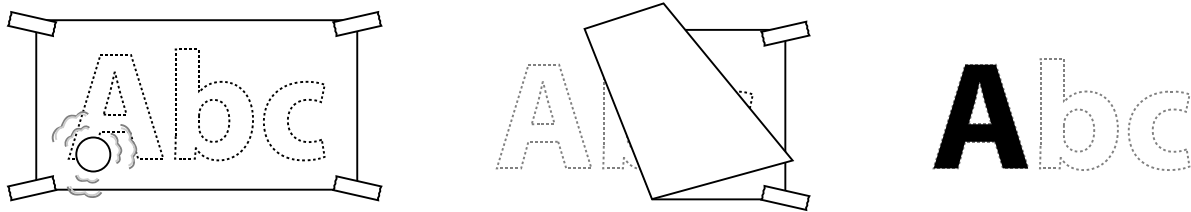

Installation instructions for interior wall-mounted acrylic letters

1. Surfaces should be thoroughly cleaned with a 50:50 mixture of isopropyl alcohol and water. Ideal tape application is accomplished when temperature is between 70°F and 100°F (21°C and 38°C) and the bond is allowed to dwell 72 hours. Initial tape application to surfaces at temperatures below 50°F (10°C) is not recommended. Consult manufacturer's directions for use and precautions when using cleaning solvents. This cleaning recommendation may not be compliant with the rules of certain Air Quality Management Districts in California; consult applicable rules before use.
2. Tape the pounce pattern onto your wall. Use the base line of the letters to level, not the edge of the paper.
3. Strike the perforated areas of the pattern using the provided pounce pad. Carefully lift a corner of the pattern to make sure enough blue powder goes through the perforations.
4. Remove the pattern without smearing the powder on the other side.



5. Remove any mask on the face of the letters and peel off the tape lining on the back to expose the sticky side of the 3M VHB (Very High Bond) tape.

Textured or uneven surfaces may require the use of silicone caulk between the acrylic and surface of the wall. Scuff the back of the letter with sandpaper where you will be applying the silicone to improve adhesion — some anti-graffiti paints and wallpapers may resist both tape and silicone and may require alternative mounting methods.

6. Using the powder outlines created with the pounce pattern, apply the letters to the wall. Press firmly in the areas where the tape was located.
7. Any conspicuous powder can be removed with a soft, clean brush.