

2020 CADILLAC PRODUCT INFORMATION CENTER BINDER TRAY ASSEMBLY INSTRUCTIONS




Step 1: Remove existing page holder structure from poles. Retain aluminum pole clamps and bolts. Discard holder and pages.


Step 2: Reuse pole clamps and the two 3/8-16 hex bolts threaded into the ends of new binder holder tubes. Tighten bolts within the clamp slots so that the book holder is at an approximately 45 degree angle as shown.

Step 3: Adjust clamp height on the poles to approximately 40" from the floor with hand knobs.


Note: The pole spacing may need to be adjusted slightly to fit width of binder tray

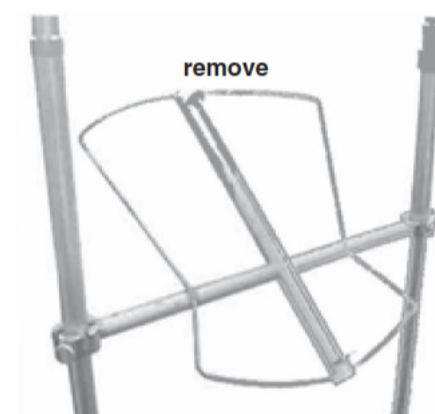

Step 1

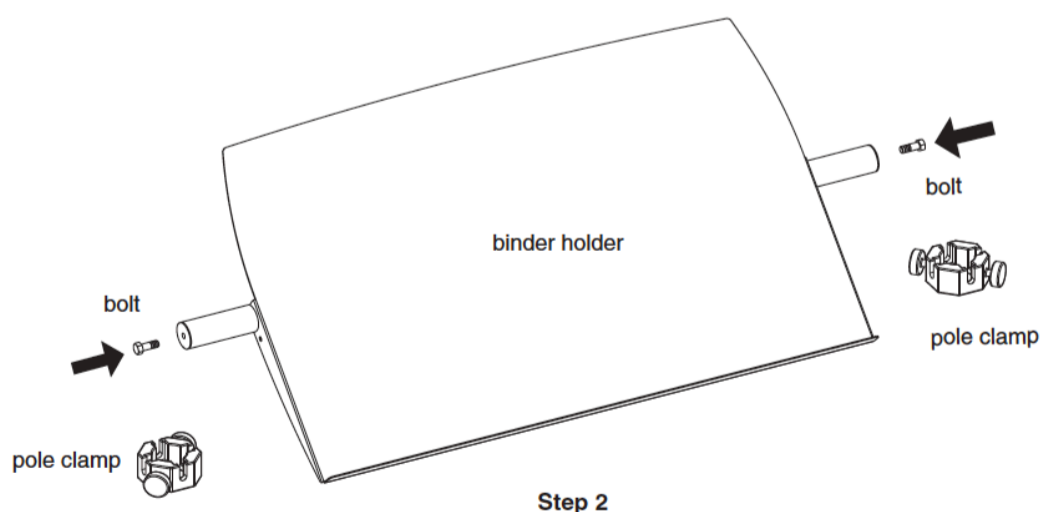

Step 2

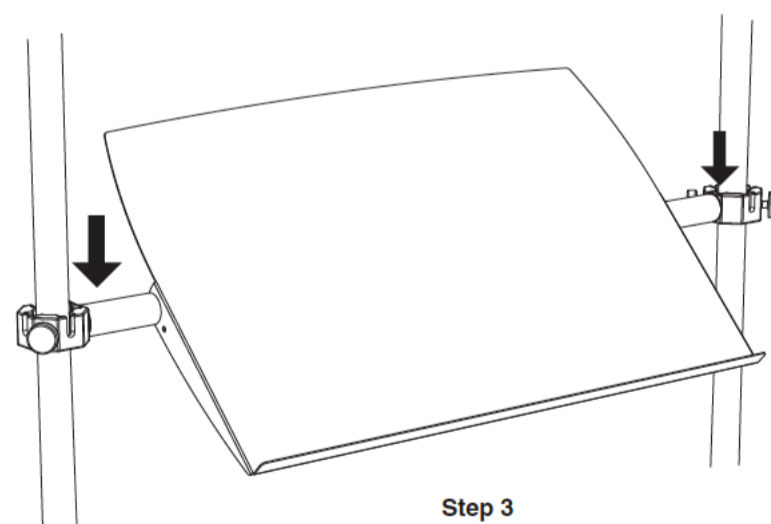

Step 3

IF YOU HAVE ANY QUESTIONS, PLEASE CALL PROGRAM HEADQUARTERS AT 1-800-766-5660.

Program Headquarters GM Dealer Support

Toll Free: 1-800-766-5660

| Email Us: GMBFMSERVICE@DCIM.COM

| gmdw.dcim.com

2020 CADILLAC PRODUCT INFORMATION CENTER BOOK ASSEMBLY & TAB ORDER INSTRUCTIONS



2020 Cadillac Product Information Center Tab & Vehicle Order

CT6/CT6-V

Escalade/ESV

XT4

XT5

First-Ever XT6



Within the next several weeks, you will receive an update with the following:

First-Ever CT5, First-Ever CT4, Accessories, OnStar

Binder Holder Configurations

Empty Tray

Closed Binder

Open Binder



IF YOU HAVE ANY QUESTIONS, PLEASE CALL PROGRAM HEADQUARTERS AT 1-800-766-5660.

Program Headquarters GM Dealer Support

Toll Free: 1-800-766-5660

| Email Us: GMBFMSERVICE@DCIM.COM

| GMDW.DCIM.COM